




BORDIGNON

BRE scrap remover


CLEANING INSTRUCTIONS




- 1 Unscrew the grain.

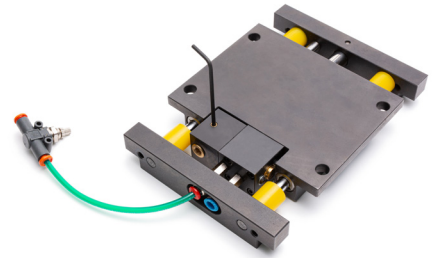


- 2 Take the grain off and check there is no dirt inside the 0,3 mm hole. You must see through the hole.

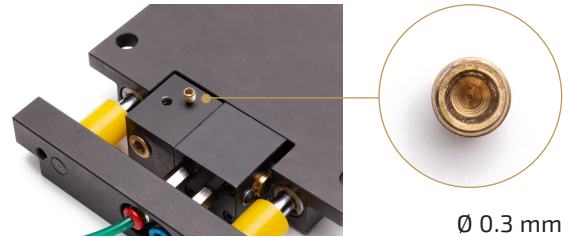


- 3 Connect the air pipe to the scrap remover.

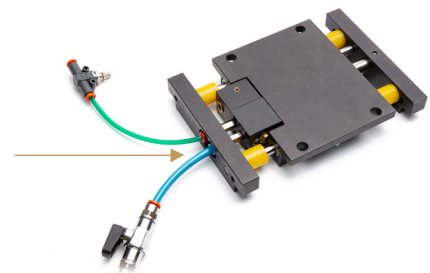


- 4 Turn and lift the scrap remover, let the (filtered) air at 6-8 BAR into the scrap remover for 1 min. to blow dirt out. **Warning: mind your hands!**

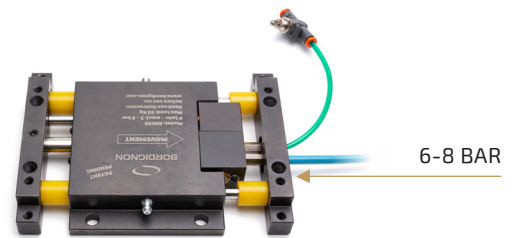

- 5 Turn the air off and put the scrap remover back to the table.

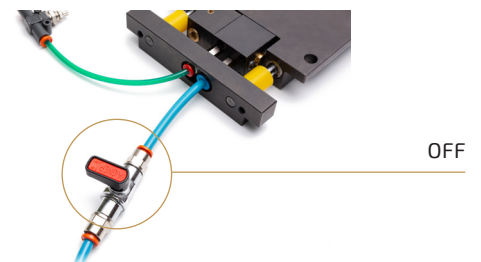

- 6 Screw the grain back into the hole but do not fix it too tight otherwise the grain may get damaged. Use the scrap remover with the air pressure needed.

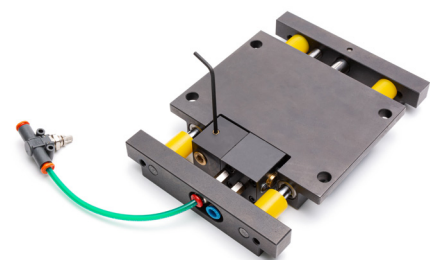

WARNING: if the scrap remover doesn't work properly after the above cleaning operation, return it to the manufacturer for checking and repairing.